

YetiCam LLC

www.YetiCam.com

Modification document for the Samsung A402

Please note that making modifications to this camera will void all warranties to the camera and could damage the camera beyond repair. YetiCam LLC is not responsible for any injuries or damage created by use of this document.

1. Remove the camera batteries and memory stick.
2. Remove screw A, B, and C from the camera noting the length of the screw.



3. Remove screws D, E, and F from the camera noting length of the screws.




YetiCam LLC

www.YetiCam.com

4. Remove screw G from the camera noting length of the screw.



5. Open up the USB cover and then with it open, pry the front of the camera away from the back of the camera. This will expose the push buttons on top of the camera that will need to be soldered to.

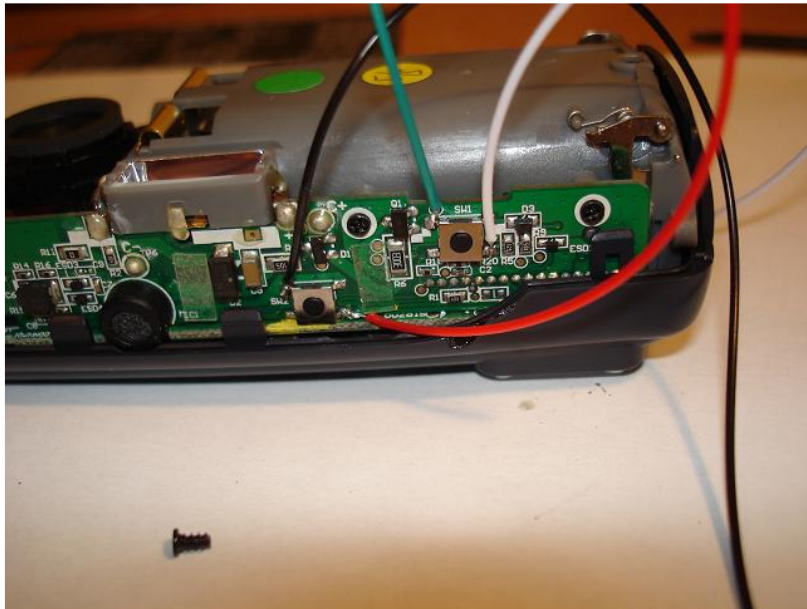

YetiCam LLC

www.YetiCam.com

6. Solder the wires to the buttons as shown and then connect the wire to the control board with the following configuration:
 - a. Red Wire to the P contact
 - b. Black Wire to the PC contact
 - c. Green Wire to the S contact
 - d. White Wire to the SC contact
7. Route wires to the outside of the camera by routing through a hole drilled into the Tripod mount or any other location.
8. Replace the front cover and replace all the screws into their respective holes.
9. The solder jumpers on the back of the control board should have A soldered to B and E soldered to F.

