

Four wire stereo jack wiring

(Pin numbers are on the bottom side of the jack)



Long Pin = Common = Unshielded Plug Wire
Pin 1 = Power = Red Plug Wire
Pin 2 = Shutter = White Plug Wire
Pin 3 = Door Switch or Extra Wire = Yellow Plug Wire

Four wire A503 jack wiring



Gold Tab = Unconnected
Lower Right Tab = Power Supply Wire = Red Plug Wire
Upper Right Tab = Shutter Common = White Plug Wire
Upper Left Tab = Power Common = Yellow Plug Wire
The two tabs on the far right are not used